



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

The gasket furnished for this application replaces the OE pre-applied RTV silicone sealant. It is designed to allow the reuse of the existing cover.

1) Using a sharp knife or razor blade, carefully trim away any RTV that protrudes above the groove on block side of the cover. Be careful not to gouge the plastic. Do not be concerned if any of the RTV pulls out of the groove. This will not prevent the gasket from sealing.

2) Carefully remove the old timing cover seal, and clean the seal recess and gasket surface, removing any oil residue.

3) Install the new seal. Do not use oil or grease on the OD of the seal. If a lubricant is desired, use soapy water.

4) Install the new gasket and cover. Torque the bolts to factory specifications.

© 2008 Federal-Mogul Corporation
Form No. I-2074 (Rev. 01/08)

Printed in U.S.A.