
INSTALLATION INSTRUCTIONS

WATER SEPARATOR FUEL REPLACEMENT CARTRIDGE

NOTE: IT IS ADVISABLE TO HANDLE THIS CARTRIDGE WITH EXTREME CARE SO THAT ELEMENT WILL NOT BE DAMAGED OR ITS PERFORMANCE ENDANGERED. FOR MAXIMUM PERFORMANCE IT IS NECESSARY TO HAVE THE ELEMENT PLEATS EXPOSED RATHER THAN IN A CAN SO THAT THE WATER DROPLETS CAN EASILY SHED THEMSELVES INTO THE FILTER SUMP.

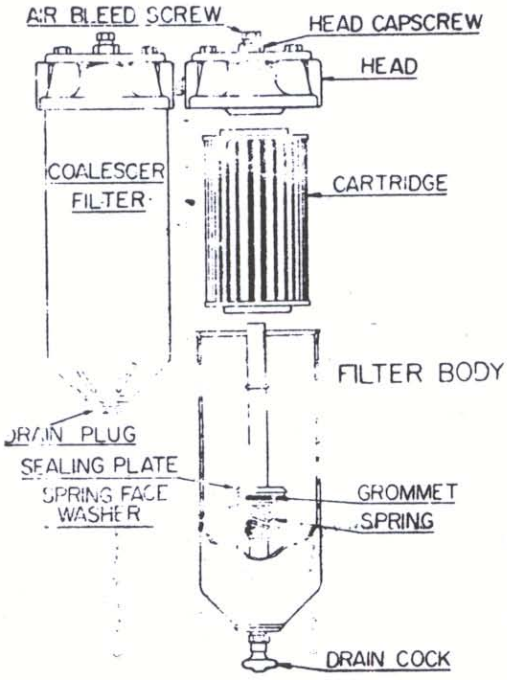

A. Loosen drain cock from filter and completely drain filter.

B. Unscrew filter head capscrew and remove filter body.

C. Remove used cartridge and clean out filter body with a clean solvent.
NOTE: Do not remove spring, grommet or sealing plate.

D. Remove old head gasket and clean gasket cavity thoroughly. Install new head gasket supplied with cartridge.

E. Install new cartridge in body and reassemble body to filter head. Tighten head capscrew securely. Tighten drain cock.

F. Start engine. Vent air from filter except in those installations where filter is used for primary or suction side application. Check all connections for leaks.

14-28661