


KAWASAKI Z900 '25-

M O U N T I N G I N S T R U C T I O N S

REF 22445

SPOILERS D12




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Alerón izquierdo	Left spoiler	1	22445J/N/C/SM3
2		Alerón derecho	Right spoiler	1	22445J/N/C/SM3
3		Soporte Izquierdo (L)	Left support (L)	1	SOPOR2P5-L22445
4		Soporte derecho (R)	Right support (R)	1	SOPOR2P5-R22445
5		Tope de goma Ø 11x Ø 5.5x 7mm	Ø 11x Ø 5.5x 7mm Bumper foot	2	TOPEGOMA--22384
6		Tornillo Allen M5x25 Ø11 ISO 7380	M5x25 Ø11 ISO 7380 allen screw	2	TORNI-I7380-766
7		Casquillo Ø 7x Ø 9x 6,5mm	Ø7xØ9x6,5mm Arrowhead	2	CASQUI-----0046
8		Tornillo allen M6x25 Ø14 ISO 7380	M6x25 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-405
9		Casquillo Ø8,5 xØ13 x3,5mm	Ø8,5 xØ13 x3,5mm Arrowhead	1	CASQUI-----775
10		Tornillo allen M5x16 DIN7991	M5x16 DIN7991 allen screw	4	TORNI-D7991-867
11		Arandela de goma Ø4,5xØ11x2mm	Ø4,5xØ11x2mm Rubber washer	4	ARAND-EPDM--722
12		Tapón tornillo M5 DIN7991	M5 DIN7991 screw cap	4	TAPON-----92
13		Tuerca M5 DIN6923	M5 DIN6923 Nut	4	TUERC-D6923-255

KAWASAKI Z900 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

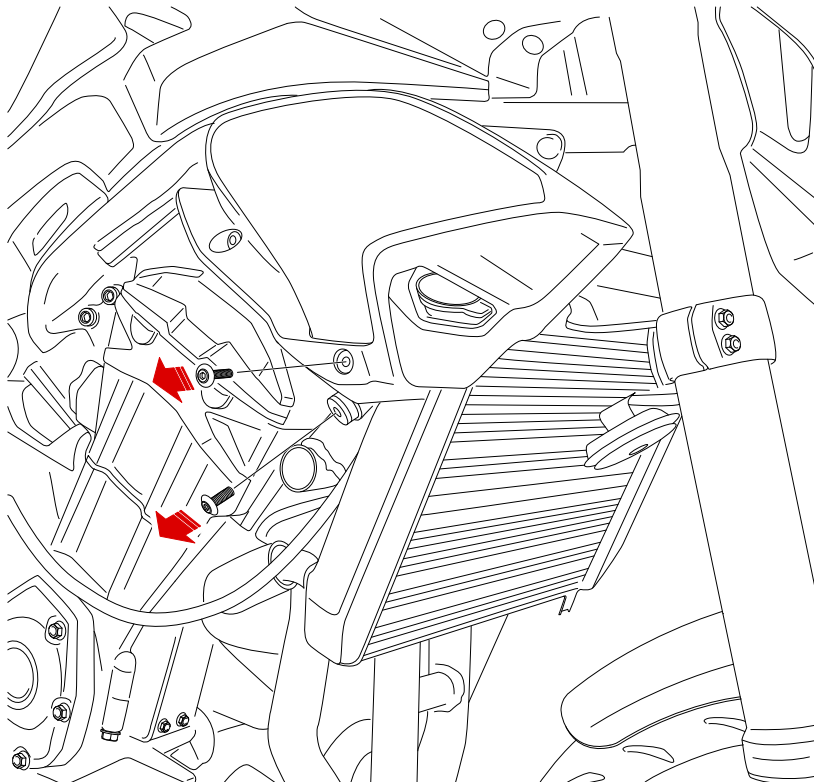

2

ASSEMBLY
MONTAJE

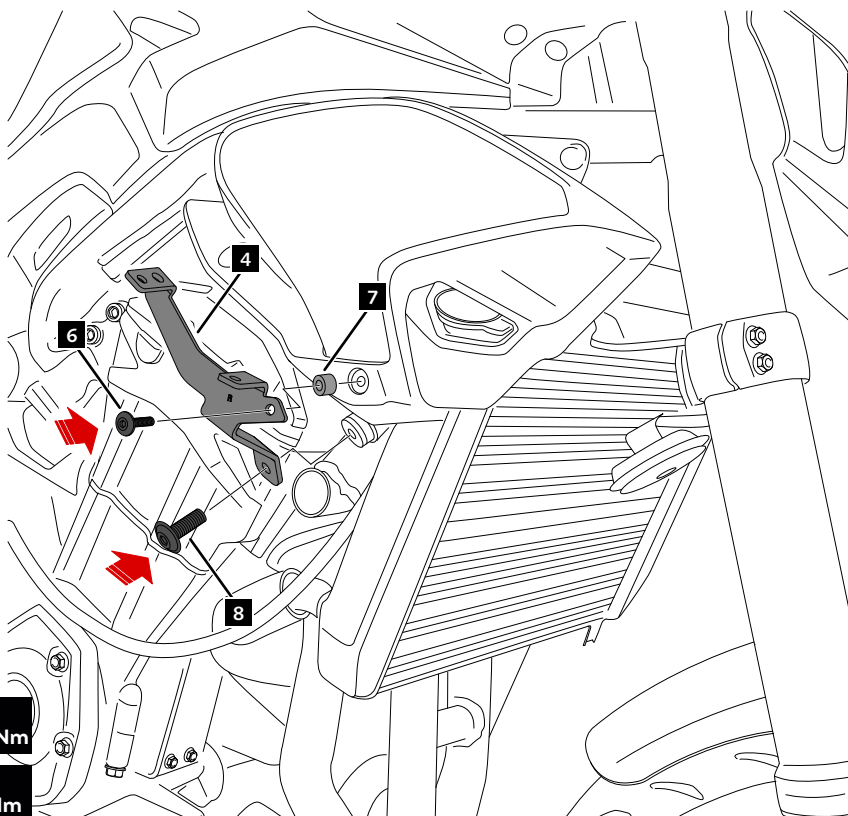

6  Par Apriete - 2.5 Nm
Tightening Torque - 2.5 Nm


8  Par Apriete - 10 Nm
Tightening Torque - 10 Nm

KAWASAKI Z900 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


3

ASSEMBLY
MONTAJE

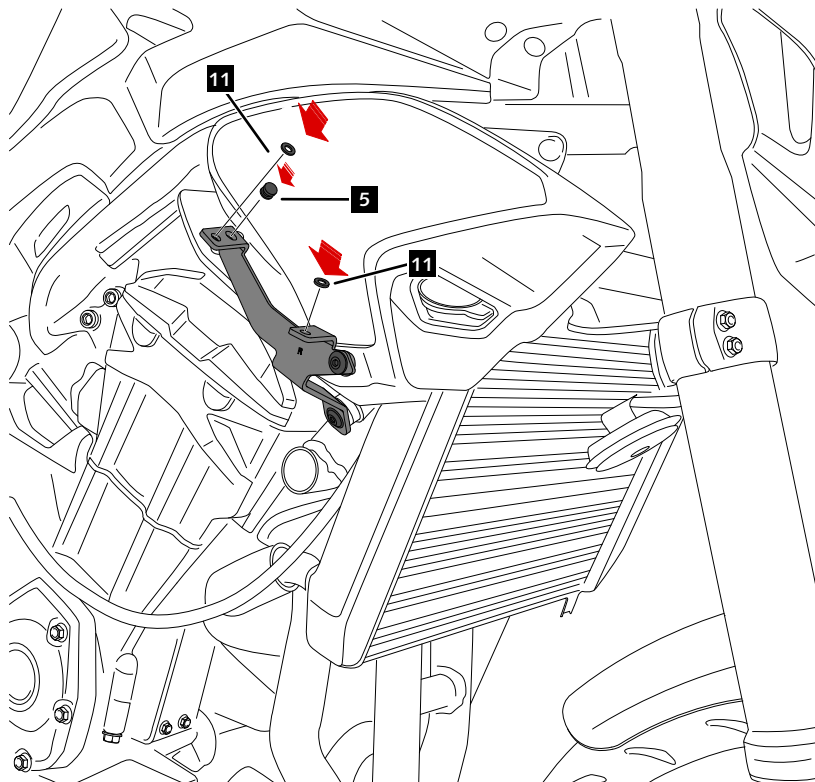

4

ASSEMBLY
MONTAJE

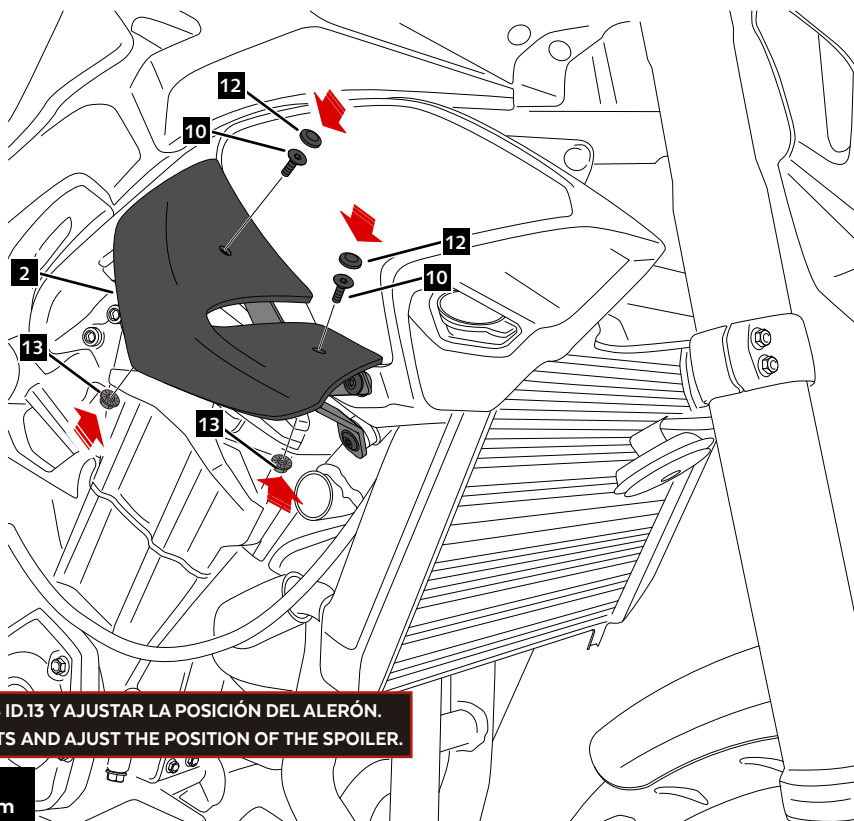

SI ES NECESARIO, AFLOJAR TUERCAS ID.13 Y AJUSTAR LA POSICIÓN DEL ALERÓN.
IF IT'S NECESSARY, LOOSEN ID.13 NUTS AND ADJUST THE POSITION OF THE SPOILER.


10  Par Apriete - 3 Nm
Tightening Torque - 3 Nm

KAWASAKI Z900 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

DISASSEMBLY
DESMONTAJE

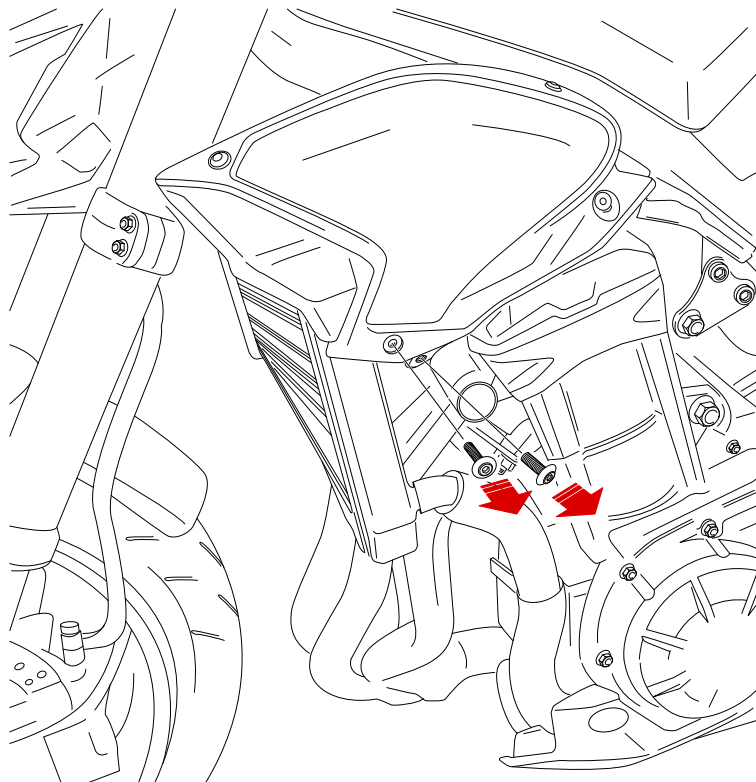

6

ASSEMBLY
MONTAJE

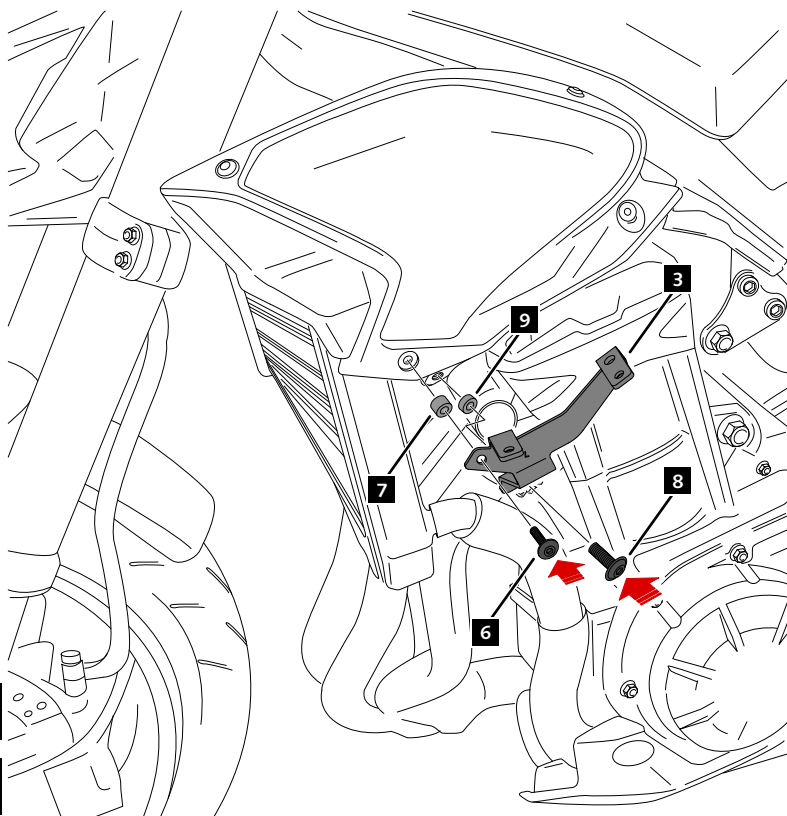

6  Par Apriete - 2.5 Nm
Tightening Torque - 2.5 Nm


8  Par Apriete - 10 Nm
Tightening Torque - 10 Nm

KAWASAKI Z900 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


7

ASSEMBLY
MONTAJE

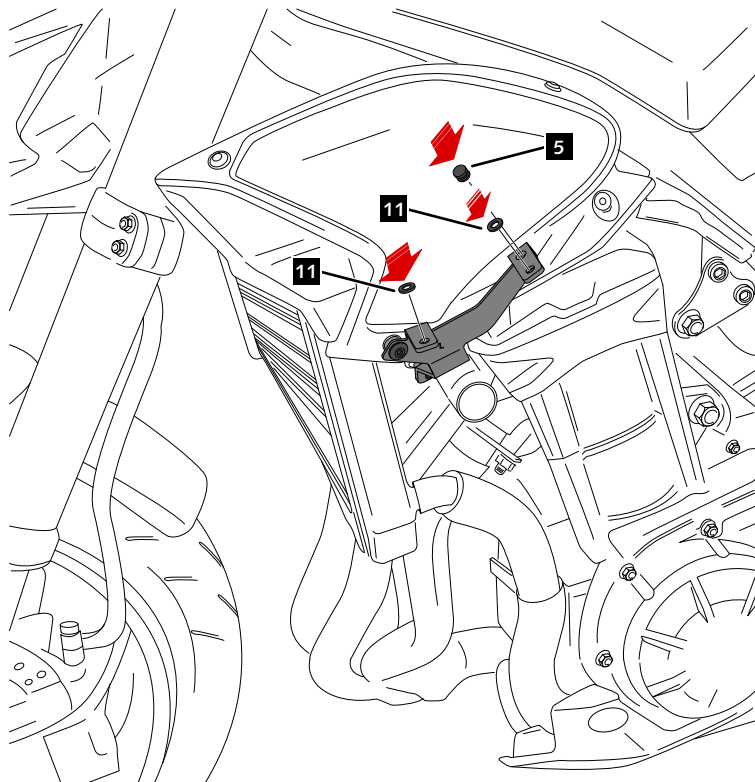

8

ASSEMBLY
MONTAJE

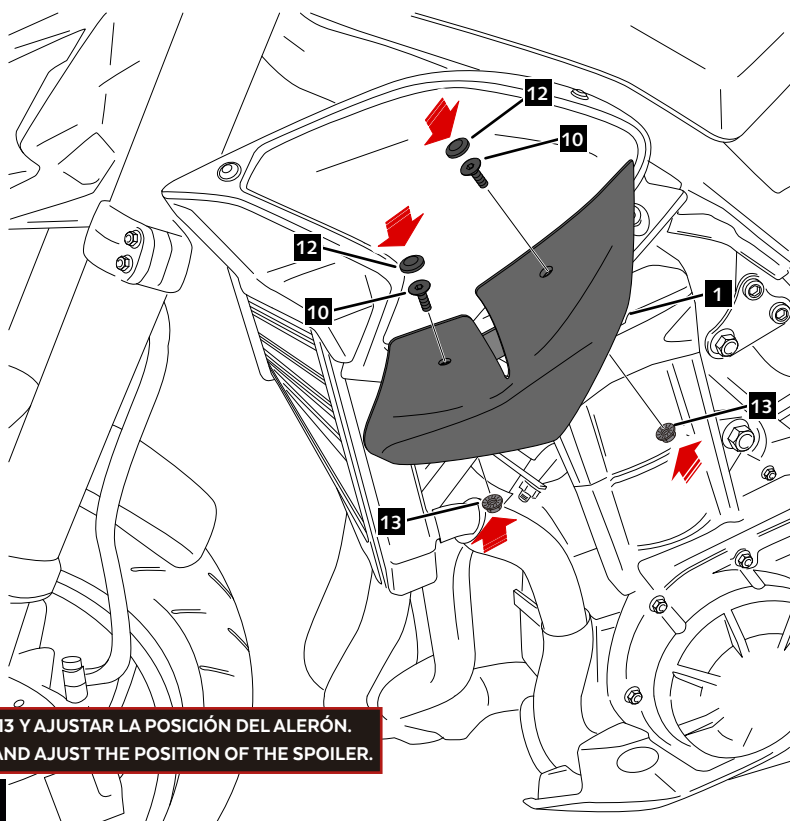

SI ES NECESARIO, AFLOJAR TUERCAS ID.13 Y AJUSTAR LA POSICIÓN DEL ALERÓN.
IF IT'S NECESSARY, LOOSEN ID.13 NUTS AND ADJUST THE POSITION OF THE SPOILER.

10  Par Apriete - 3 Nm
Tightening Torque - 3 Nm