



EDELBROCK 94 CARBURETOR-CHOKE CABLE BRACKET

Part #1156

INSTALLATION INSTRUCTIONS

PLEASE study these instructions carefully before beginning this installation. Most installations can be accomplished with common tools and procedures. However, you should be familiar with and comfortable working on your vehicle. If you do not feel comfortable performing this installation, it is recommended to have the installation completed by a qualified mechanic. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday.

DESCRIPTION: This choke bracket kit provides users with a means of securing the cable housing of a manual choke cable in place so that the choke cable may open and close the choke butterfly on the carburetor. This bracket is a replica of the original Ford bracket that mounted to the carburetor, it includes all the necessary hardware needed to mount the bracket to an Edelbrock 94, or similar carburetors.



KIT CONTENTS:

- 1 - Choke Cable Bracket
- 1 - Choke Bracket Clamp
- 1 - Square Nut
- 1 - Bolt



INSTALLATION:

1. Remove carburetor bowl bolt labeled "A", install the new bracket over the flange and replace the original bolt.
2. Loosen the cable retaining screw ("B") on the bracket, feed the choke cable through, then tighten the screw so that the cable housing is snugly secured.
3. Loosen the cable stop bolt ("C") on the pivot, feed the cable through - ensuring that the cable knob and choke butterfly are in the closed position - then tighten the cable stop.

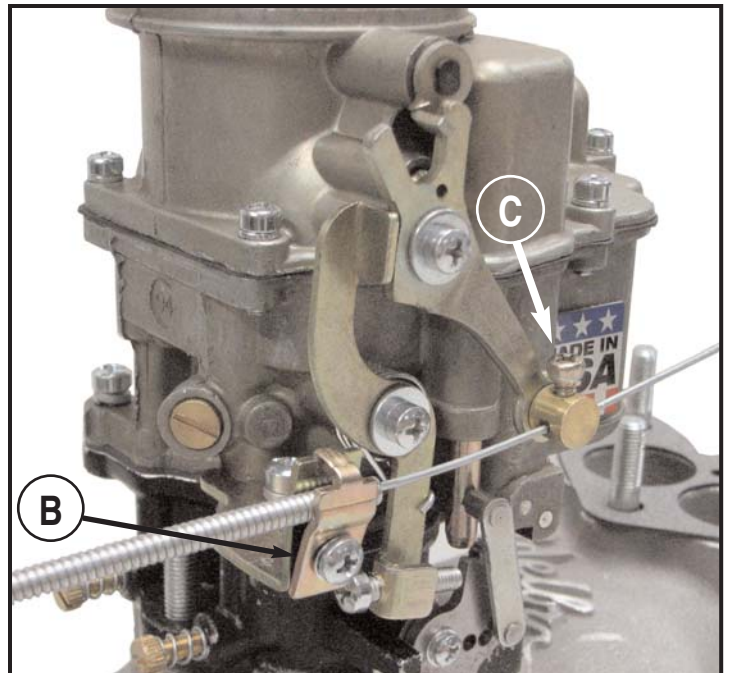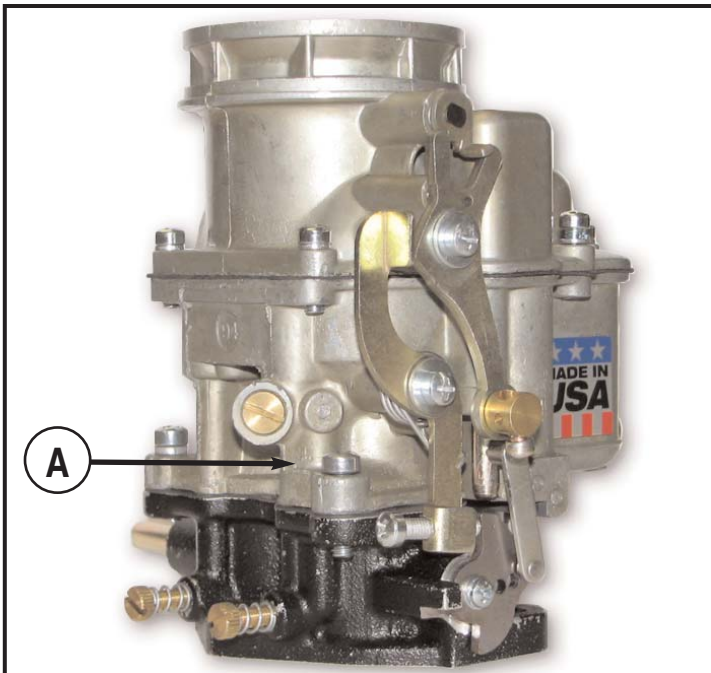

Edelbrock LLC • 2700 California St. • Torrance, CA 90503

Tech-Line: 1-800-416-8628 • Office Line: 310-781-2222