IMF109

RALLYARMOR®
setting the standard in mud flaps®

2023+ Acura Integra Type S Mud Flap Installation Instructions

Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF109 KIT CONTENTS *CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION*		
MUD FLAP KIT PN: MF109 *SEE PAGE 4 DRAWINGS*	**PART DESCRIPTION**	**QUANTITY**
MF90-LF	LEFT FRONT	**1**
MF90-RF	RIGHT FRONT	**1**
MF109-LR	LEFT REAR	**1**
MF109-RR	RIGHT REAR	**1**
BRACKET PN: BMF109 *SEE PG 4*		
BMF109-LR 	BRACKET LEFT REAR	**1**
BMF109-RR 	BRACKET RIGHT REAR	**1**
HARDWARE KIT PN: HMF109 *SEE PG 4*		
1SP 	SPACER	**2**
1SS 	SCREW	**10**
2SS 	LONG SCREW	**2**
BLKNUT 	NUT	**2**
HXBLT 	BOLT	**2**
INS7 	INSERT	**10**
SMF29-1 	FOAM SPACER	**2**
SMWASH 	WASHER	**18**

FRONT FLAP

Bracket/Hardware 1 x Flap → 1 x 1SP; 2 x 1SS; 1 x 2SS; 4 x SMWASH; OPTIONAL 2 x INS7

To gain access inner wheel well area, turn steering wheel towards installation side. **Do not fully tighten fasteners until mud flap is completely aligned to vehicle.**

RALLYARMOR®
setting the standard in mud flaps®

2023+ Acura Integra Type S Mud Flap Installation Instructions

FIGURE A If equipped with factory splash guards, remove guards and screws 1 – 4.

FIGURE B For vehicles without factory splash guards and fasteners 1 & 2 do not exist, install INS7 into mounts 1 & 2. If factory fasteners do exist, temporarily remove.

FIGURE C Install 1SP between liner and flap, over mount 4.

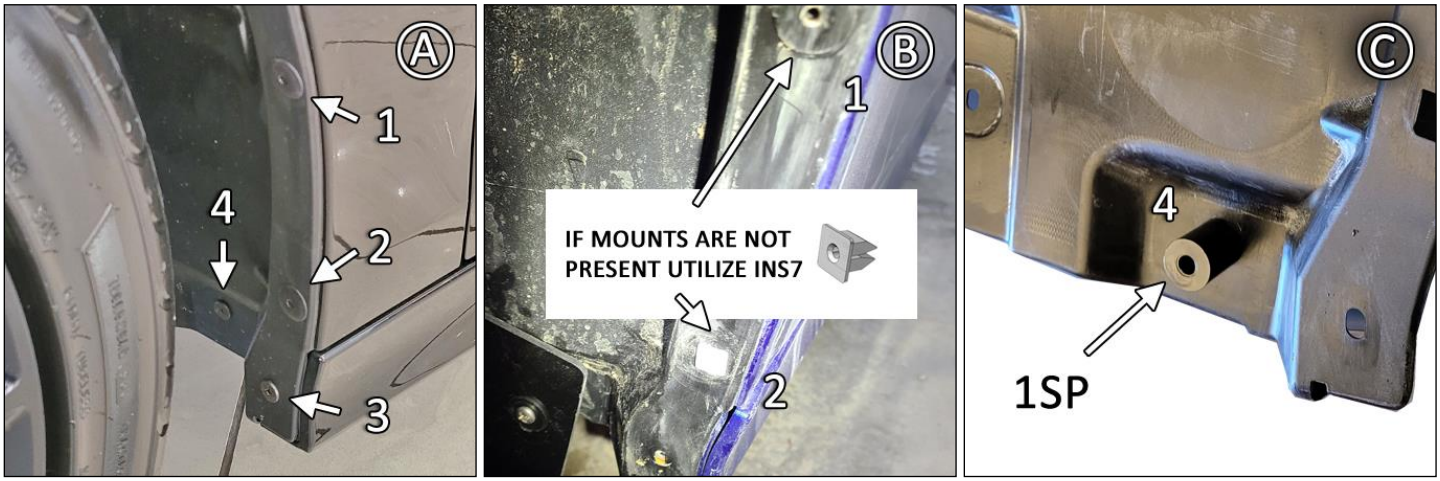

FIGURE D Position logo-side of flap facing vehicle rear. Fasten SMWASH& 1SS into mounts 1 & 2 and SMWASH & factory screw into mount 3. Install SMWASH & 2SS into flap mount 4 and 1SP.

FIGURE E/F Check clearance between tire and flap. Align flaps to even ground before tightening fasteners until washers just seat against flap.

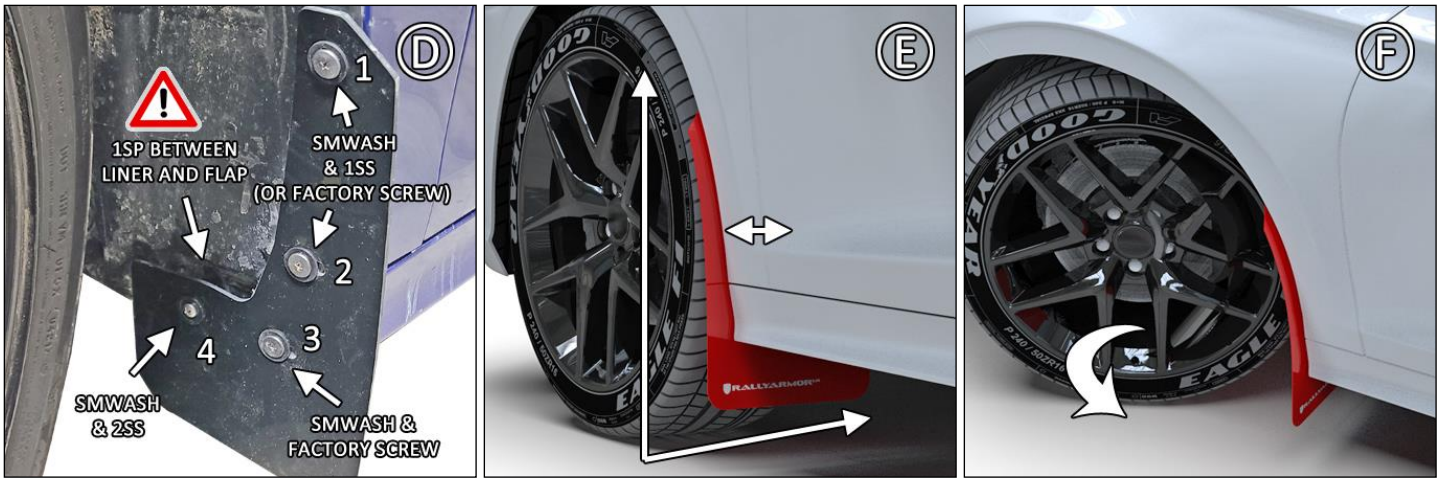

REAR FLAP

Bracket & Hardware 1 x Flap→ BMF109-LR/RR; 3 x 1SS; 1 x BLKNUT; 1 x HXBLT; 3 x INS7; 1 x SMF29-1; 5 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

FIGURE G/H Remove and retain factory screw 1 and underbody screw 2.

FIGURE I Press INS7 into BMF109-LR/RR mounts 3 - 5. To seat INS7 flush, use needle nose pliers to compress stems.

RALLYARMOR®
setting the standard in mud flaps®

2023+ Acura Integra Type S Mud Flap Installation Instructions

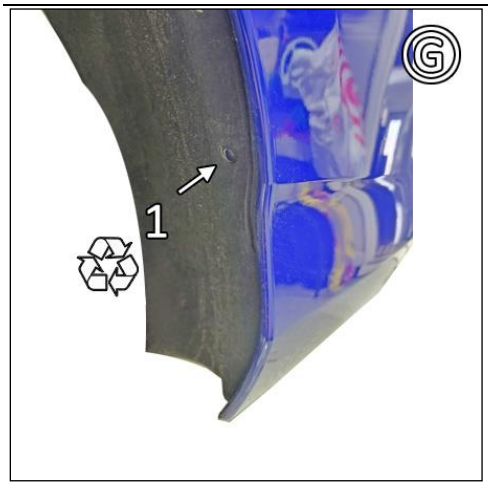



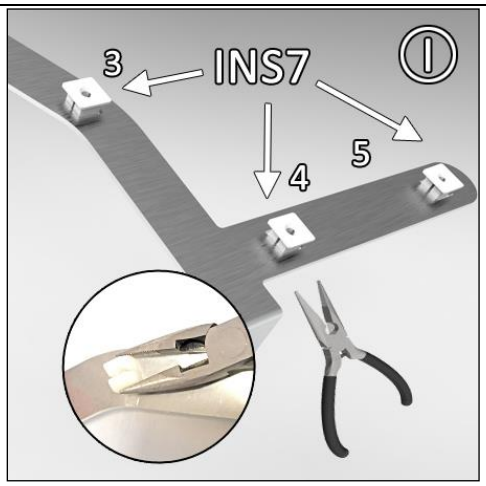

FIGURE J/K Adhere SMF29-1 over BMF109-LR/RR mount 2. Place HXBLT through mount 3.

FIGURE L/M Install BMF109-LR/RR between bumper and liner. Reinstall underbody factory fastener through mount 2.

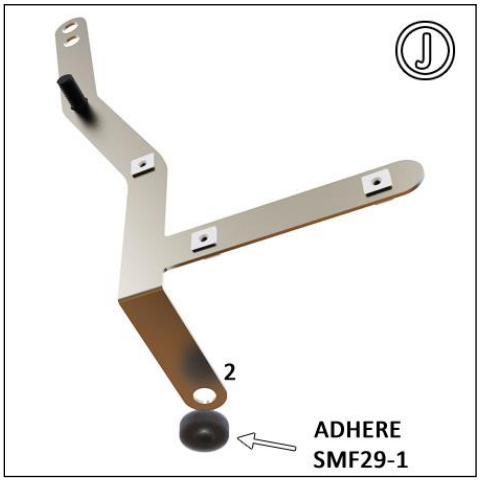

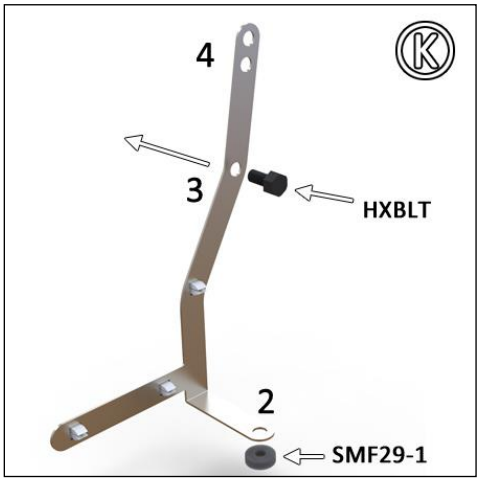

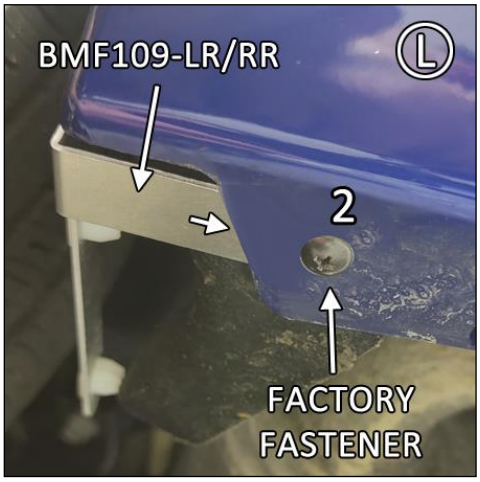

FIGURE N Place logo-side of flap against BMF109-LR/RR. Install SMWASH & factory fastener into mount 1 and SMWASH & BLKNUT into mount 3. Install SMWASH & 1SS through mounts 4 - 6.

FIGURE O Align flaps to even ground before tightening fasteners, just until washers seat against flap.

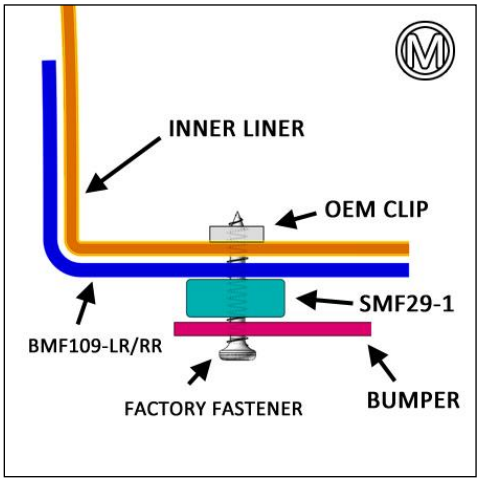

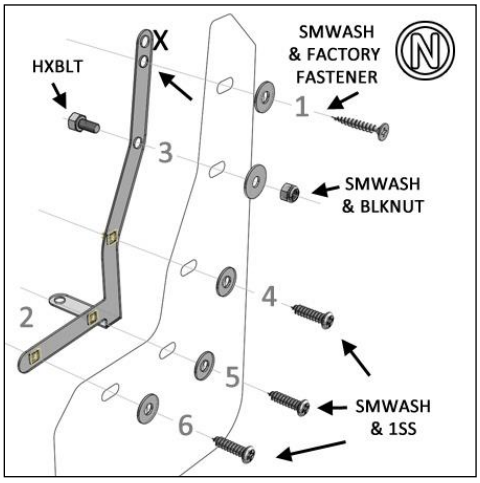



RALLYARMOR®
setting **the** standard in mud flaps®

2023+ Acura Integra Type S Mud Flap Installation Instructions

