


DESCRIPTION:

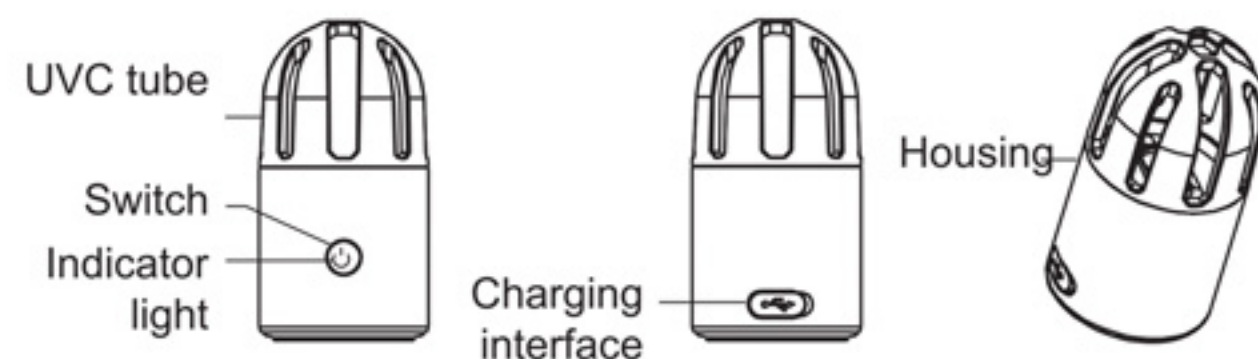

WHERE TO USE:

Car Interior

Face mask


Wardrobe

Hotel

Pet House

Office Table

BOX CONTENTS:

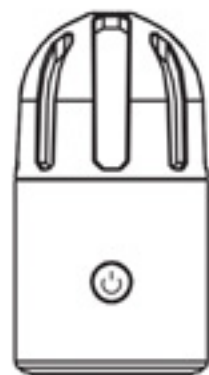

Sterilization lamp*1



USB cable*1



user's manual*1

Mini 3W UV



USER MANUAL

SPECIFICATIONS

Mini UV Sanitizer Lamp	Battery Capacity: 750mA
Material: ABS Plastic	Charging Time: 2 Hours
Power Cable: USB	Working Time: 10 Full Cycles
Product size: 2" x 4"	Time: 15min Sterilization
Power: 3 Watts	Effective Area: 20-30 sqft.

INSTRUCTIONS

STARTUP INSTRUCTIONS:

- Hold power button for 3 seconds- Button will begin flashing.
- Place the lamp where you wish to sterilize and leave the room.
- After 30 seconds the lamp will turn on and start to sterilize.
- The lamp will Shutdown Automatically after 15 Minutes.

SHUTDOWN INSTRUCTIONS:

To turn off the lamp while in operation press the power button.

PRECAUTIONS



NOTICE



MIS-USE OF THIS PRODUCT MAY RESULT IN INJURY
USE ONLY AS DIRECTED- DO NOT ATTEMPT TO MODIFY



NEVER STARE DIRECTLY INTO THE UV LIGHT. DO NOT
FACE UV LIGHT NEAR YOUR EYES OR EYES OF OTHERS.



EXPOSURE TO DIRECT UV MAY CAUSE SUNBURN. DO
NOT HOLD LIGHT TO SKIN. TURN OFF WHEN NOT IN USE.

PRECAUTIONS

This Device may generate some Ozone.
Do not use in closed area without proper ventilation.
Open Windows if Ozone smell is strong.

Store the lamp in a safe place when not in use.

As with any electronic device- Keep Dry.

Glass tube can be cleaned with an alcohol swab.

Do not drop, excessively shake, or shock the lamp.

If the glass tube breaks discard it immediately.

Keep this product out of the reach of children.

CHARGING PRECAUTIONS

The lamp should not be left unsupervised while charging.

If USB cord appears to be damaged replace, do not use.

Charge using an approved USB charging dock.

Do not leave in direct sunlight when charging.

Do not charge in outdoor or damp area.